


**WARNING**

- To avoid damaging the product, please release the gas from the magazines or cartridges while not operating.
- Sales and usage are restricted to 18-year-old people or older. Those below 18 years old are not allowed neither to purchase nor to operate alone.
- Never aim or shoot at people or animals. Please beware of childrens' mis-handling.
- Please read and fully understand all details listed in this instruction manual before using this air gun. You can download it from [www.icsbb.com](http://www.icsbb.com) if you lose this instruction manual.

6mm BB



### 1 PART DESCRIPTION

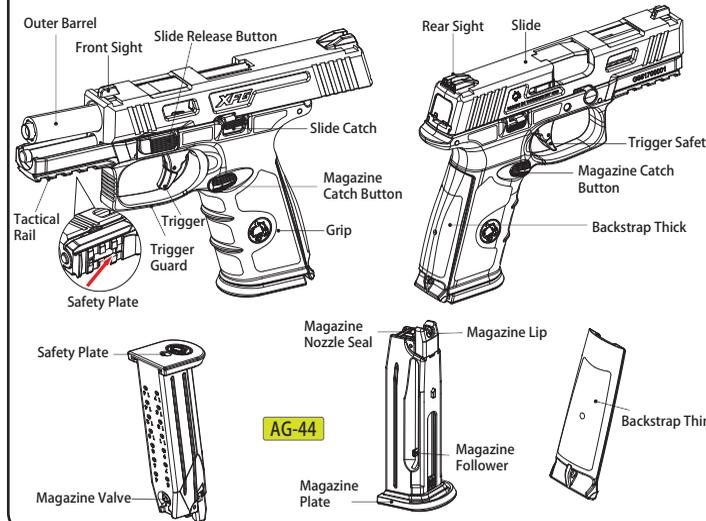


**WARNING-ATTENTION**



This model is featured with Gas-Blow-Back function. The slide will be pushed back and forth by the gas pressure strongly and rapidly while firing. To prevent injury, please keep your face and finger away from the slide.


The pistol could be damaged when using at temperature of 35°C (95°F) or above.

### 2 SAFETY DEVICE

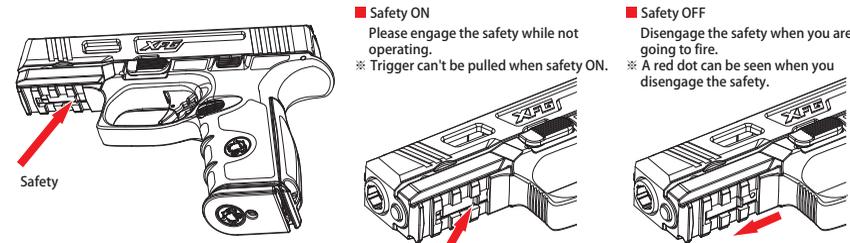

- Safety ON**  
Please engage the safety while not operating.  
\* Trigger can't be pulled when safety ON.
- Safety OFF**  
Disengage the safety when you are going to fire.  
\* A red dot can be seen when you disengage the safety.

### 3 LOADING MAGAZINE

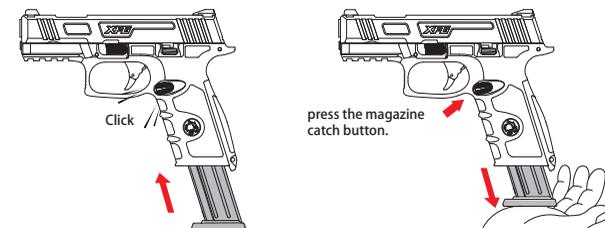


**WARNING-ATTENTION**

- Load the magazine until it clicks into the locking position.  
\* Do not insert the magazine by force.
- Release the magazine by pressing the magazine catch button.  
\* Hold the magazine when releasing it from the pistol grip to prevent it from dropping.

### 4 CHARGING GAS

For the optimum product performance, please charge your magazine with 10-12kg airsoft use green gas. If you use green gas with non-recommended number of kg, it may cause damage or malfunction to the product.

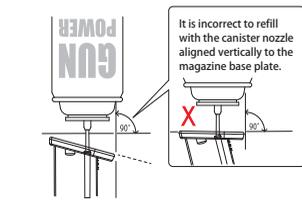


- Precautions while filling:**
  - If you fill the magazine with a non-vertical way from up towards down, and caused the magazine is not completely filled, please deflate the gas completely, and refill the gas one more time as instructed.
  - Fill the gas until the gas starts to leak out. When the gas is fully filled, gas inside the gas canister and magazine are balance without refilling anymore. It is the normal condition that the gas starts to leak out because it is not able to keep filling. Please stop filling immediately.
  - Please use your magazine under normal temperature!
- If operating in environment of 20°C or below, the gas pressure will drop and might cause abnormal functions. (The magazine will work normally again when temperature returns to normal temperature.)
- If operating in environment of 35°C or above, the gas pressure will be too high and might cause abnormal functions. (The magazine will work normally again when temperature returns to normal temperature.)
- If you fill the magazine with gas and fire dozens of shots even under normal temperature, the gas pressure will also drop and cause the gas temperature to drop. Preparing several spare magazines for exchange is recommended.

**WARNING-ATTENTION**

- Please avoid to touch the injection hole. It might cause frostbites or low temperature burns if the skin is adhered by the gas.
- To preserve the magazine  
Magazines are very delicate parts. Dropping them may cause damage or abnormality.
- Please avoid foreign matter remains on the magazine lip and injection hole on the magazine, which may cause abnormality.
- If refilling is necessary, please avoid to proceed when the magazine is loaded. Please unload the magazine before proceeding.
- Please do not place the magazines in wet or watery places, which may cause abnormality.

### 5 LOADING BBs

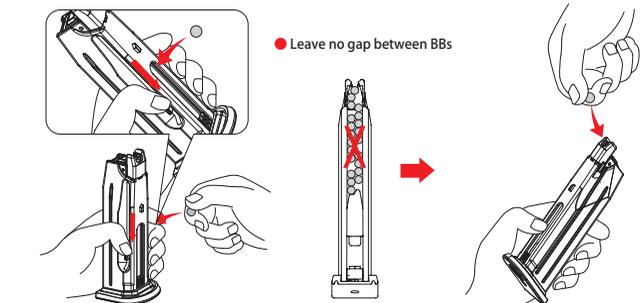

**WARNING-ATTENTION**

- Do not release the magazine follower abruptly while pressing the follower. Releasing the follower carelessly may damage the magazine lip.
- Pull the magazine follower down to the end, insert BBs into the BB slot. (Maximum 19 rounds)
- You may insert the last BB through the magazine lip.  
\* Do not attempt to insert more than 19 BBs.

### 6 Loading

- Insert the magazine.
- Pull the slide to the end and hold (the hammer will be pressed down).
- Release the slide (the slide is held at the back at the moment).
- Press the slide catch downward, the slide will be pushed forward (a BB pellet will be loaded into the barrel).
- Pull the trigger to fire.


**WARNING-ATTENTION**

- Keep your face and fingers away from the slide while the slide is operating.
- When the pistol is unloaded, the slide can be pushed forward when you pull and release it from the end.
- When the pistol is loaded, loading repeatedly will make the BBs load into the barrel repeatedly, which will lead to malfunction while firing and cause danger while firing.
- When the hammer is pressed down, pulling the trigger will fire the bb. Please take extra notice.

### 7 SHOOTING


- Switch the safety to FIRE.
- Load the pistol according to step 6.
- Pull the trigger to fire (a BB pellet will be fired and the slide will be pushed backward).

The slide will be blown back when firing.

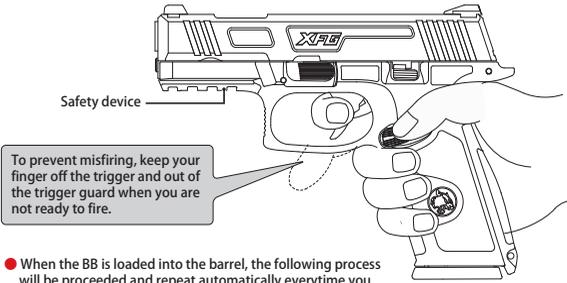

To prevent misfiring, keep your finger off the trigger and out of the trigger guard when you are not ready to fire.

- When the BB is loaded into the barrel, the following process will be proceeded and repeat automatically everytime you pull the trigger:  
BB fired → Slide movement (blowed backward) → Load the next BB (slide re-positioned)

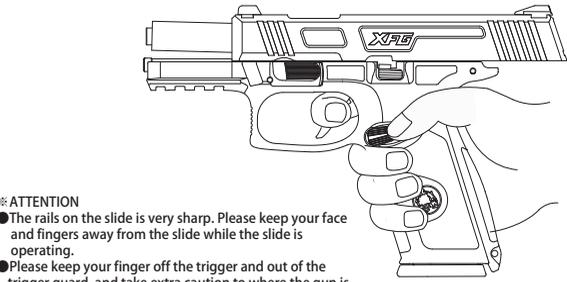

- ATTENTION**
- The rails on the slide is very sharp. Please keep your face and fingers away from the slide while the slide is operating.
- Please keep your finger off the trigger and out of the trigger guard, and take extra caution to where the gun is aiming while proceeding non-firing operations.

**WARNING-ATTENTION**

- Power Depression  
When the temperature inside the magazine is too low, the gas power will be depressed.
- The movement of the slide will be delayed.
- The slide catch will not bounced.
- The shooting range will not be far.



- Shooting posture  
Please do not operate the pistol upside down for optimum performance.



### 8 STORAGE

- Press the magazine catch button to release the magazine.
- Make sure the inner barrel is clear. If not, pull the slide backward, and turn the pistol upside down to remove (push the BB pellet out from the barrel by the clearing rod is also recommended).
- Press the slide catch lever to release the slide.
- Pull the trigger and fire several times towards safety directions, and make sure no BBs are left inside the barrel.

