


Please read the [Instruction Manual] carefully and make full understanding of the details noted in the contents before use.



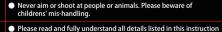



manual before using this air gun. You can download it from www.icsbb.com if you lose this instruction manual.




I CHIH SHIVAN ENTERPRISE CO., LTD Veb:www.icsbb.com Mail:info@icsbb.com Tel:+886-4-25256461










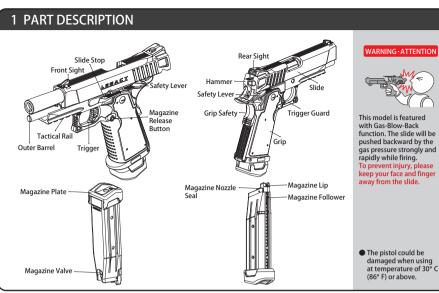


2 SAFETY DEVICE

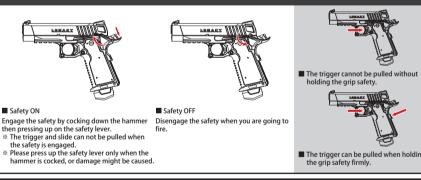

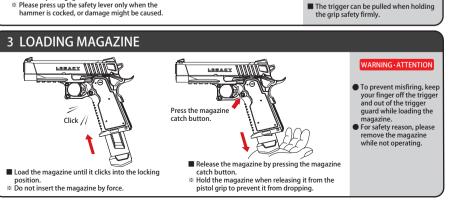

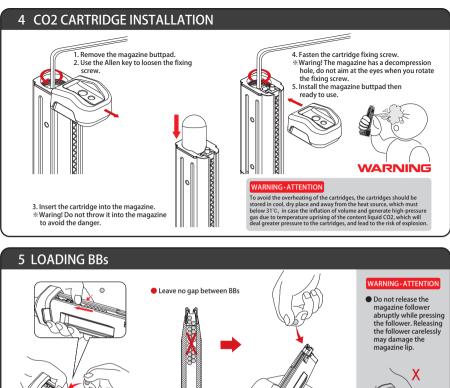

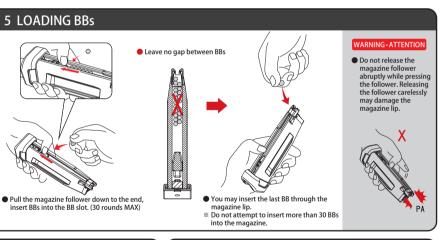



Please use a 2mm Allen wrench to adjust the trigger pull hex screw.

- Please adjust according to personal habit.
- The trigger could be locked by fastening the hex screw to the end, please release the screw



7 Loading

- 1. Insert the magazine.
- 2. Pull the slide to the end and hold (the hammer will be pressed down).
- 3. Release the slide (the slide is held at the back at the moment)
- 4. Press the slide catch downward, the slide will be pushed forward (a BB pellet will be loaded into



ARNING · ATTENTION

- Keep your face and fingers awa from the slide while the slide is
- When the magazine is detached the slide stop will not lock the slide spontaneously after your releasing the slide.
- When the pistol is loaded, the BBs load into the barrel repeatedly, which will lead to malfunction while firing and
- cause danger.

 When the hammer is pressed down, pulling the trigger wil fire the bb. Please take extra

ARNING · ATTENTION Load the pistol according to step 7. The slide will be blown back 3. Pull the trigger to fire (a BB pellet will be fired and and forth when firing. Power Depression the slide will be pushed backward). When the temperature inside the magazine is too low, the gas power will be depressed. The movement of the slide will be The slide catch will not bounced.



Please do not operate the pistol up side down for optimum performance





9 STORAGE

8 SHOOTING 1. Switch the safety to FIRE.

To prevent misfiring, keep your

finger off the trigger and out of

the trigger guard when you are

next BB(slide re-positioned)

When the BB is loaded into the barrel, the following process

will be proceeded and repeat automatically everytime you

BB fired → Slide movement (blowed backward) → Load the

not ready to fire.

pull the trigger:

1) Press the magazine catch button to release the magazine.

Press the

magazine catch

• The rails on the slide is very sharp. Please keep your

is aiming while proceeding non-firing operations.

face and fingers away from the slide while the slide is Please keep your finger off the trigger and out of the

trigger guard, and take extra caution to where the gun

3 Press the slide catch lever to release the slide. (2) Make sure the inner barrel is clear. If not, pull the slide backward.

(4) Pull the trigger and fire several times towards safety directions. and turn the pistol up side down to remove (push the BB pellet and make sure no BBs are left inside the barrel. out from the barrel by the clearing rod is also recommended).







- ① Press the Magazine Release Button to unload the magazine.
- ② Pull back the slide and press the slide stop upward to lock it. 3 Insert the dedicated tool into the hole on the recoil spring guide as
- 4 Push the Slide backward and align the notch corresponds to the slide stop as shown.



- ⑤ Press the slide stop button on the right to remove it.
- Push the slide forward to detach it. Meanwhile, The recoil spring
- guide set is contained.

 ① The recoil spring guide set can be easily removed by slightly pushing it forward and taking it out.


 ⑧ Push the outer barrel set forward to remove. You may disassemble the recoil spring guide by detaching the dedicated tool if necessary.





non-firing operations. Watch out for the rod may bounce out of off the recoil spring guide set.

11 H-UP ADJUSTMENT

Please disassemble and remove the slide as step 10 instructed.
 Slightly rotate the screw to adjust the H-UP.

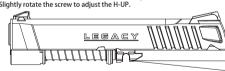

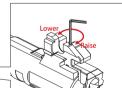


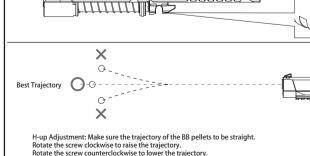

12 ASSEMBLY

- * Please check the following status before assembly: △ The hammer must be down pressed.
- 1) Insert the dedicated tool into the hole on the rod and reverse Step 10. to assemble the recoil
- spring guide set.

 ② Assemble the outer barrel set by pushing it
- back into the slide. 3 Assemble the recoil spring guide set to the

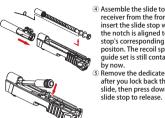


4 Assemble the slide to the receiver from the front and ICS will not be responsible insert the slide stop when the notch is aligned to slide

stop's corresponding positon. The recoil spring guide set is still contained (5) Remove the dedicated tool after you lock back the slide, then press down the

VARNING · ATTENTION

for any part assembling errors, missing parts, and issues such as malfunctions accidents, injuries. all the maintaining expenses will be borne by the customers.

13 BASIC TROUBLESHOOTING GUIDE							
SYMPTOMS	POSSIBLE CAUSE						
No regnence	The safety is ON. (No firing)	Switch the safety to "OFF". (refer to step 2)					
No response	Insufficient gas in the cartridge	Replace a new cartridge after confirming the cartridge is empty (refer to step 7, item 4 and step 4)					
CO2 comes out from the barrel	Temperature is too low. (during the winter)	Reheat the cartridge to room temperature.					
	Cartridge over-pressured	It will return normal after firing several times.					
BBs fly up	H-UP is over adjusted.	Adjust the H-UP screw clockwise. (refer to step 9)					
Shooting range is too short	H-UP is not enough.	Adjust the H-UP screw counter-clockwise. (refer to step 9					
	Foreign matters or oil in the inner barrel.	Clean the inner barrel and H-UP bucking.					
	Cartridge over-pressured.	It will return normal after firing several times.					
BBs roll out of barrel	H-UP is not enough.	Adjust the H-UP screw counter-clockwise. (refer to step 9)					
Jammed	H-UP is over adjusted.	Adjust the H-UP screw clockwise. (refer to step 9)					
	Bad BBs, oversize BBs	0.2g to 0.25g 6mm caliber BBs are recommended for optimum performance.					
	Foreign matters or oil in the inner barrel.	Clean the inner barrel.					
Trigger cannot be pulled.	BBs or foreign matters jam inside the case.	Take out the BBs or foreign matters.					
CO2 leaking from	Bad installation of the cartridge	Replace a new cartridge after confirming the cartridge is empty.(refer to step 7, item 4 and step 4)					
perforated seat	Not enough silicon oil for perforated seat .	Grease the perforated seat.					
Magazine lip cannot hold the BBs.	Magazine lip abraded	Replace the Magazine lip.					

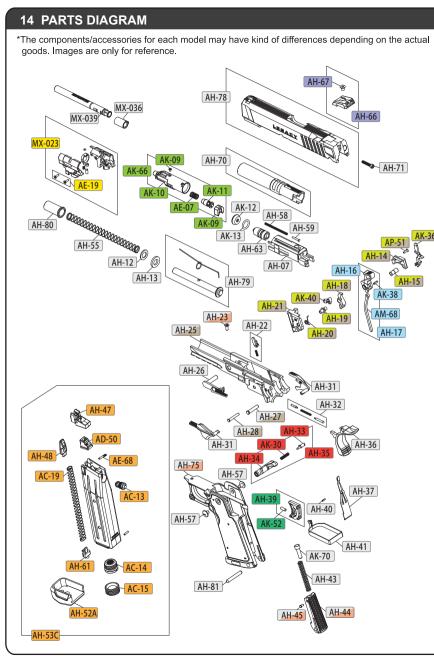

15 PARTS DESCRIPTION								
ITEM#	DESCRIPTION	Q'TY	ITEM#	DESCRIPTION	Q'T\			
AH-07	Hi-Capa Cylinder Housing	1	AH-79	4.3" Hi-Capa Recoil Spring Guide Rod	1			
AH-11	Hi-Capa Recoil Spring	1	AII-13	with Reverse Plug Retention Clip	'			
AH-12	Hi-Capa Shock Buffer Washer	1	AH-81	Hammer Housing Pin (Short)	1			
AH-13	Hi-Capa Shock Buffer Rubber	1	AC-13	CO2 Valve	1			
AH-14	Hi-Capa Hammer Housing-Right	1	AC-14	CO2 Cylinder Perforated Seat	1			
AH-15	Hi-Capa Hammer Sleeve	1	AC-15	CO2 Cylinder Housing Screw	1			
AH-16	Hi-Capa Hammer	1	AC-19	CO2 Magazine Spring-Short	1			
AH-17	Hi-Capa Hammer Combination	1	AD-50	XPD Magazine Nozzle Seal	1			
AH-18	Hi-Capa Sear	1	AE-07	XAE Valve Spring	1			
AH-19	Hi-Capa Sear Sleeve	1	AE-19	XAE H-UP Chamber Screw	2			
AH-20	Hi-Capa Hammer Knocker Spring	1	AE-68	XAE Magazine Lip Pin	1			
AH-21	Hi-Capa Hammer Housing-Right	1	AE-70	XAE Magazine Follower Spring	1			
AH-22	Hi-Capa Hammer Disconnect with Spring		AK-09	Vulture Valve Cover with Screw	1			
AH-23	Hi-Capa Middle Frame Screw	1	AK-10	Vulture Cylinder	1			
AH-25	Hi-Capa Middle Frame	1	AK-11	Vulture Valve	1			
AH-26	Hi-Capa Slide Release	1	AK-12	Vulture Valve Plate	1			
AH-27	Hi-Capa Hammer Pin	1	AK-13	Cylinder Cover Housing O-Ring	1			
AH-28	Hi-Capa Sear Pin	1	AK-30	Vulture Magazine Catch Spring	1			
AH-29	Hi-Capa Middle Frame Combination	1	AK-36	Vulture Hammer Disconnect Pin	1			
AH-30	Hi-Capa Hammer Housing Combination	1	AK-38	Hammer Brace Rod Pin	1			
AH-31	Hi-Capa Slide Safety	1	AK-40	Vulture Hammer Knocker	1			
AH-32	Slide Release Pin and Spring	1	AK-52	Vulture Trigger adjustment Screw	1			
AH-33	Hi-Capa Magazine Catch Lock	1	AK-66	Vulture Cylinder Combination	1			
AH-34	Hi-Capa Magazine Catch	1	AK-70	Vulture Hammer Spring Holder	1			
AH-35	Hi-Capa Magazine Catch Combination	1	AM-68	BM9 Hammer Brace Rod	1			
AH-36	Hi-Capa Grip Safety	1	AP-51	PM2 Magazine Cover Screw	1			
AH-37	Hi-Capa Sear Spring	1	MX-023	Master Hi-Capa TDC Hop Chamber	1			
AH-39	Hi-Capa Trigger	1	MX-036	Master Ver.2 R-Hop Chamber Rubber	1			
AH-40	Hi-Capa Trigger Bar Pin	1	MX-039	Master Inner Barrel 97mm	1			
AH-41	Hi-Capa Trigger Bar	1						
AH-42	Hi-Capa Magwell & Pin	1						
AH-43	Hi-Capa Hammer Spring	1						
AH-44	Hi-Capa Hammer Spring Housing	1						
AH-45	Hi-Capa Hammer Spring Lock Pin	1						
AH-47	Hi-Capa Magazine Lip	1						
AH-48	Hi-Capa Magazine Follower	1			_			
AH-52	Hi-Capa Magzine Plate	1						
AH-53C	Hi-Capa CO2 Magazine-30rds	1						
AH-55	Hi-Capa Recoil Spring	1						
AH-57	Hi-Capa Grip Screw	2						
AH-58	Hi-Capa Cylinder Housing Spring	1						
AH-59	Hi-Capa Cylinder Housing Spring Pin	1						
AH-61	Hi-Capa CO2 Magazine Plate Stop	1						
AH-63	Hi-Capa Cylinder Cover Housing	1						
AH-66	Hi-Capa 4.3 Rear Sight	1						
AH-67	Hi-Capa 4.3 Rear Sight Screw	1						
AH-70	4.3" Hi-Capa Outer Barrel-BK	1						
AH-71	Hi-Capa Cylinder Housing Screw	1						
AH-75	Hi-Capa Stippled Grip	1						
AH-76	Hi-Capa Stippled Grip Combination	1						
AH-78	LEGACY Slide with Front Sight Combination	1						
AH-80	4.3" Recoil Spring Guide	1						
	CS AIRSOFT \	www	.icsbb	.com info@icsbb.con	n			