


3 可動部的說明 Movable Parts

3-1 槍身結合3號齒正確位置圖 The correct position of sector gear before reassembling

注意 未進行歸位校正，會損壞活塞及齒輪。

※ The piston and gear may be damaged without correcting the position in advance.

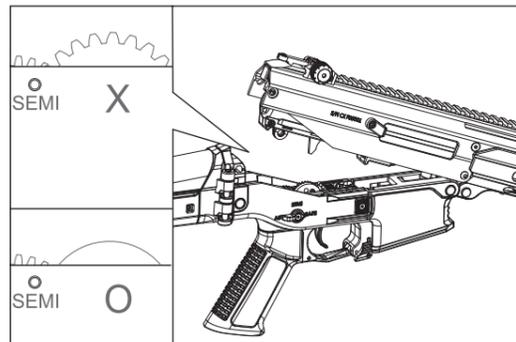

3號齒在槍身結合時，必須轉到正確位置，才可將上槍身蓋下。
Make sure the sector gear is turned to the correct position before reassembling the receiver/gearbox.

3-3 槍機の後定與復位 Decorated Bolt Cover Adjustment

1. 將槍機拉柄向後拉，槍機飾片即可固定在開啟狀態。
 2. 按下槍機釋放鈕，槍機飾片即可復位。
1. Pull the charging handle backward, the decorated bolt plate can be opened and held at the rear.
 2. Press the Charging handle downward to return the decorated bolt plate to the original position.


Note: Do not put your finger or any foreign matter in the chamber when releasing charging handle.

4 精確射擊調整動作 Precision Targeting Adjustment

4-1 準星視孔調整方式 Front and Rear Sight Adjustment


A: 準星高度調整 Front Sights Adjustment

使用準星扳手來調整準星高度。
逆時鐘旋轉即可升高準星高度；順時鐘即可降低準星高度。
Use the wrench tool to adjust the height of the sight.
Rotate counterclockwise to raise the height of the sight, and clockwise to lower the sight.

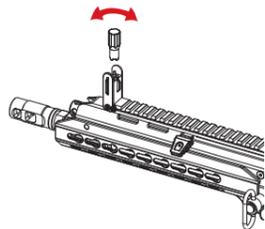

B: 視孔調整方式 Rear Sight Adjustment


依旋鈕方向旋轉即可將視孔組左右調整。
Adjust the windage of the rear sight by rotating the knobs according to the instruct directions.

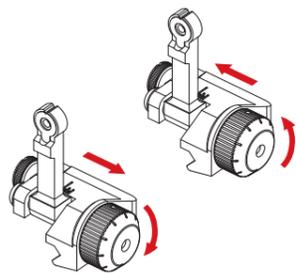

C: 彈跳式準星/折疊視孔 Back-Up Front Sight / Folded Rear Sight

按壓準星壓鈕即可彈起準星座
向前按壓準星座即可收合準星座
Press the button on the front sight to deploy.
Push the sight forward to store.

向上推即可將視孔立起；
向後推即可將視孔收和。
Push the rear sight upward to raise the sight.
Push the sight backward to store.

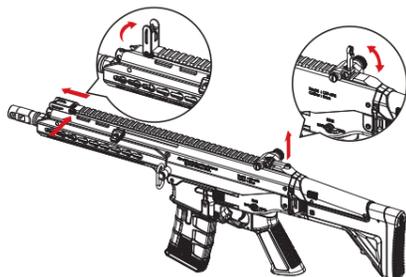

4-2 選擇射擊模式 Shooting Mode Setting



※ 此系列產品具備「關保險自動釋放彈簧功能」。
1. 槍上有彈匣的情況下，關保險會自動釋放彈簧，有機率造成第一發雙彈射出或者小便彈，屬正常情況。
2. 槍枝使用完畢，請轉至單發模式下，擊發2-3下後做清槍動作，再開保險確保槍管內已無殘彈。
3. 上下槍身分解前，務必先關保險釋放彈簧，避免造成齒輪倒轉損壞活塞。
※ 關保險自動釋放，可延長彈簧壽命，避免長期擠壓造成疲乏

※ This product is equipped with an auto spring tension releases mechanism in the safety mode.


1. Having a magazine loaded, it is a normal condition that the gun might shoot a double shot, or a weak shot after turning it to safety and releasing the tension stored in the spring.
 2. After finishing playing, fire the gun 2-3 times in semi auto to clear the remaining BBs inside the hop-up chamber, then switch the selector lever to safety to ensure there is no BB left inside.
 3. Before opening the upper and lower receivers, always release the spring tension by turning the selector lever to safety position, this will avoid spring damage from sudden release from the sector gear.
- ※ The spring tension release mechanism can extend the spring lifetime by avoiding spring fatigued from long time compression.

5 H-UP彈道調整 H-UP adjustment


注意 非必要時，手指請勿放置於H-UP調整處，避免受傷

※ To avoid injuries, only put your finger on the H-up adjustment when necessary.

槍機飾片 Decorated Bolt Plate

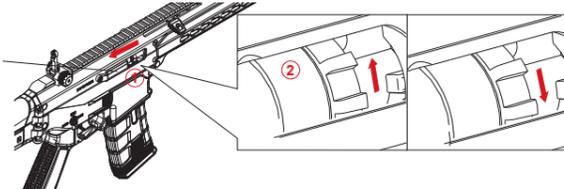

1. 將槍機拉柄往後拉，槍機飾片向後打開，即可進行彈道調整。
 2. 視彈道進行撥盤調整，調整完即可放回槍機拉柄。
1. To adjust the trajectory, pull the charging handle back to the end to open the decorated bolt plate backward.
 2. Rotate the dial to adjust the trajectory. Release the charging handle only when you finished the adjustment.

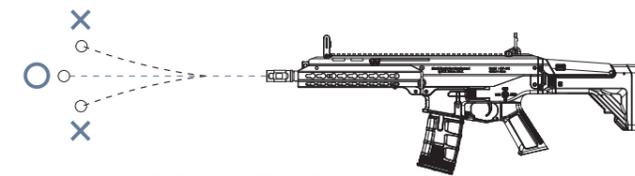


H-UP調整：BB彈呈現一直線的彈道才是正確射法。
過於上飄：將撥盤向上旋轉。
過於下墜：將撥盤向下旋轉。
H-up Adjustment: Make sure the trajectory of the BB pellets to be straight.
When the BB pellet flies up: Rotate the dial counter-clockwise to lower the trajectory.
When the BB pellet falls down: Rotate the dial clockwise to raise the trajectory.

6 電池及護木的拆裝方法 Batteries and handguard installation

注意 重新組裝時，必須依反向動作做組合

※ Reassembling is the reverse of disassembling procedures.

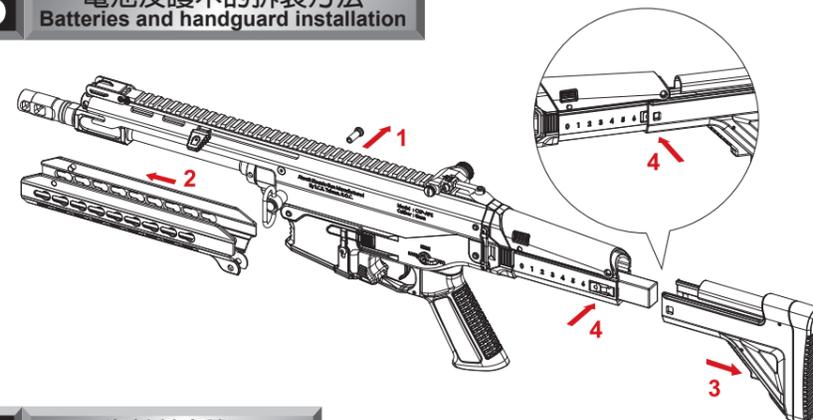


1. 取下護木插銷
 2. 下護木往前抽出
 3. 安壓槍托調整桿並拉至最後(卡榫所在位置)
 4. 將槍托套固定片向內壓，即可將槍托取下，方便安裝電池
1. Remove the handguard pin.
 2. Push the lower handguard forward to remove.
 3. Press the stock adjustment lever and pull the stock to the end.
 4. Press the stock locking button inward to remove the stock and for easy battery installation.


7 齒輪箱拆解 Disassemble gearbox

注意 先卸彈匣跟電池，再進行拆解

※ Unload the magazine and battery before you proceed to disassemble.

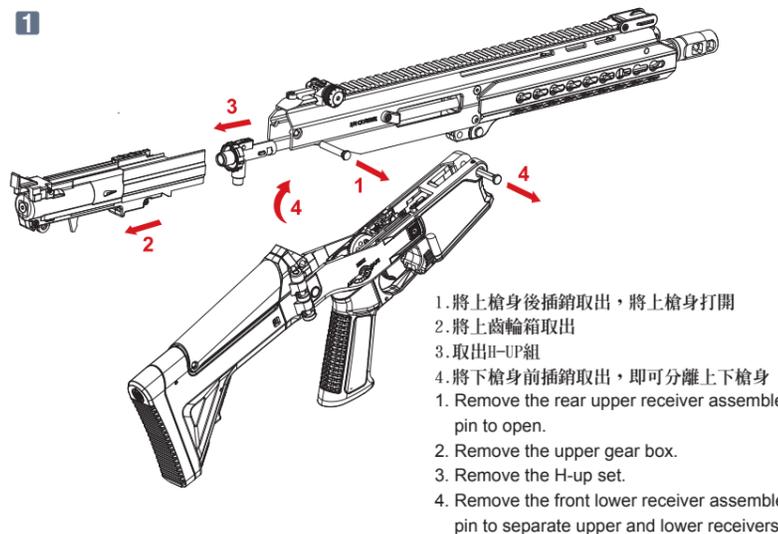


1. 將上槍身後插銷取出，將上槍身打開
 2. 將上齒輪箱取出
 3. 取出H-UP組
 4. 將下槍身前插銷取出，即可分離上下槍身
1. Remove the rear upper receiver assemble pin to open.
 2. Remove the upper gear box.
 3. Remove the H-up set.
 4. Remove the front lower receiver assemble pin to separate upper and lower receivers.

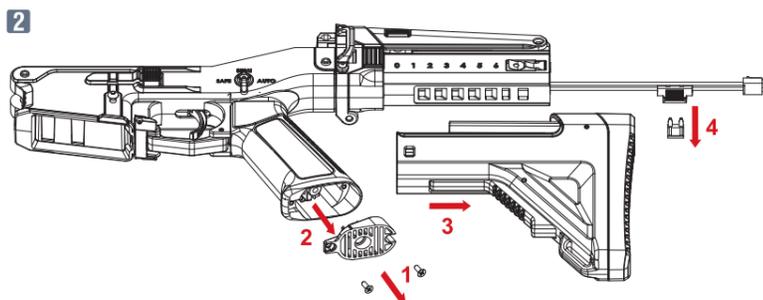


1. 旋開握把底蓋螺絲並卸下握把底蓋
 2. 將馬達拆下
 3. 取下槍托(參考步驟6)
 4. 取下保險絲
1. Unscrew and remove the pistol grip butt cap.
 2. Remove the motor.
 3. Remove the stock (refer to step 6).
 4. Dismantle the fuse.

注意 重新組裝時，必須依反向動作組合，並小心線材破損

※ While Reassembling, following the reverse procedure of disassembling is a must, and beware of wire breakage.

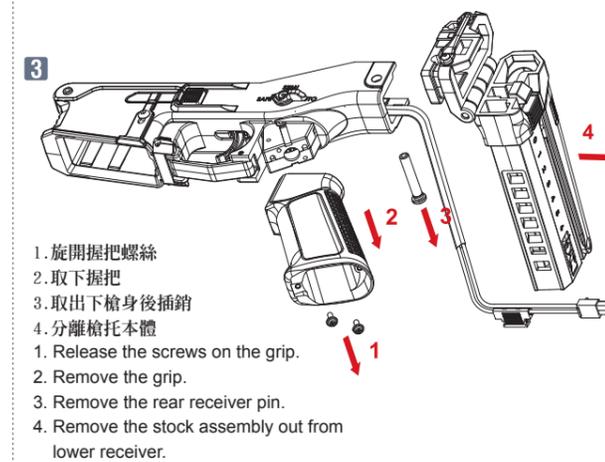

1. 旋開握把螺絲
 2. 取下握把
 3. 取出下槍身後插銷
 4. 分離槍托本體
1. Release the screws on the grip.
 2. Remove the grip.
 3. Remove the rear receiver pin.
 4. Remove the stock assembly out from lower receiver.

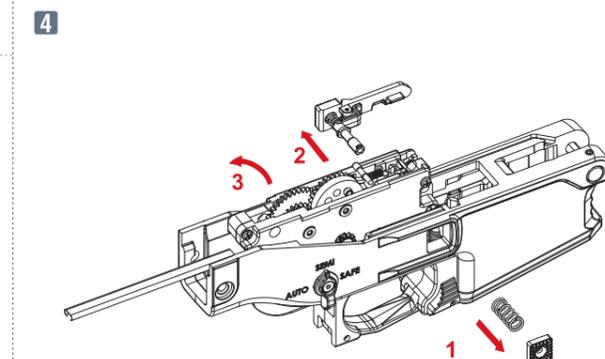

1. 旋開彈匣卡榫螺絲
 2. 取下彈匣卡榫
 3. 將下齒輪箱取出
1. Unscrew to remove the magazine release button.
 2. Remove the magazine catch.
 3. Remove the lower gearbox.