



CXP-UK1/UK1R HANDGUARD

1

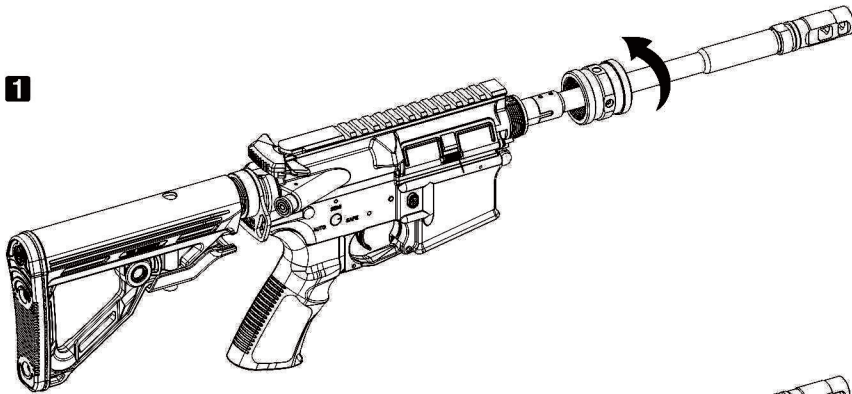


1. 先安裝護木後段鎖緊
Fasten the back
segment of handguard

2

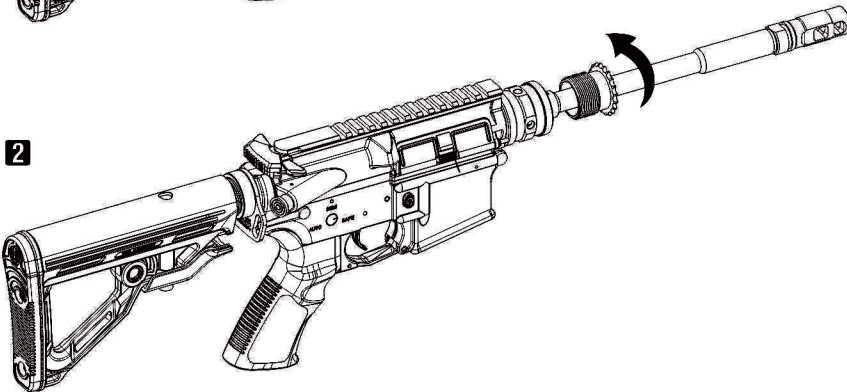


2. 星狀環將槍管鎖固
Locking the outer
barrel with delta ring

3

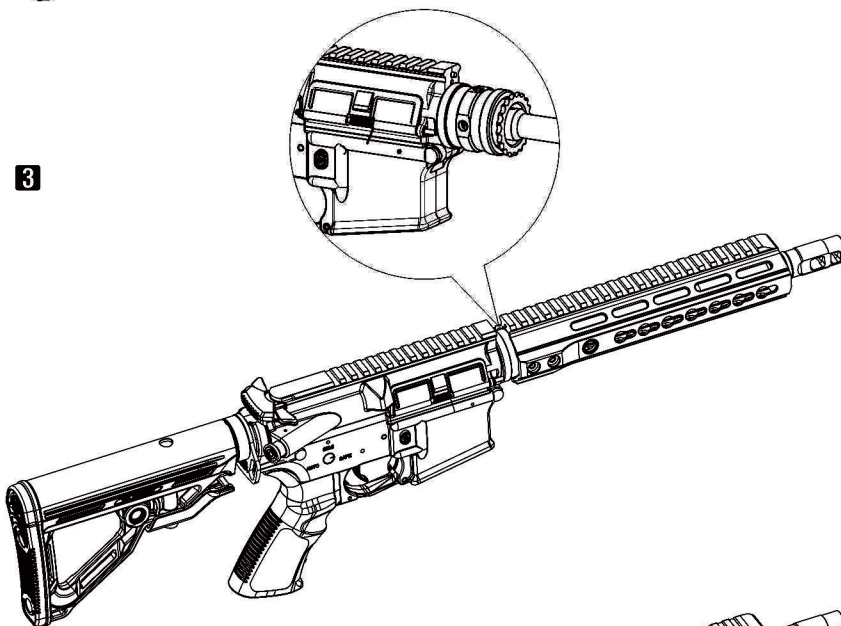

3. 護木與槍身定位結合
Assemble handguard
and upper receiver to
the position

4

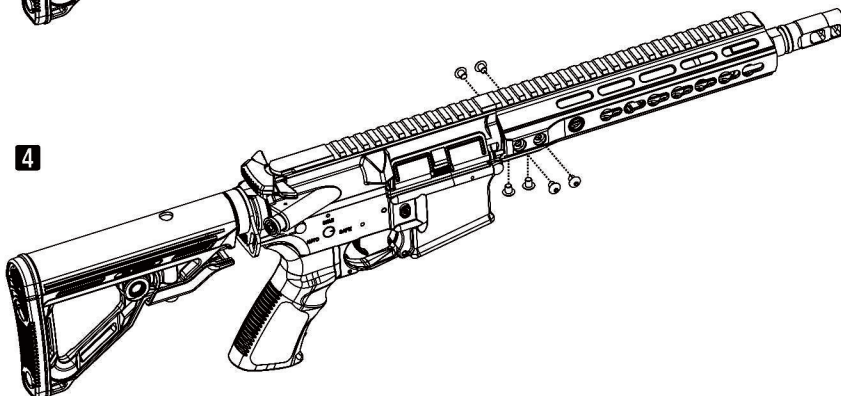

4. 將六顆螺絲鎖固
Fasten down the six
pcs of screws