



MP-61
戰術軌道固定座+加高座
Hi & Low Tactical Mount

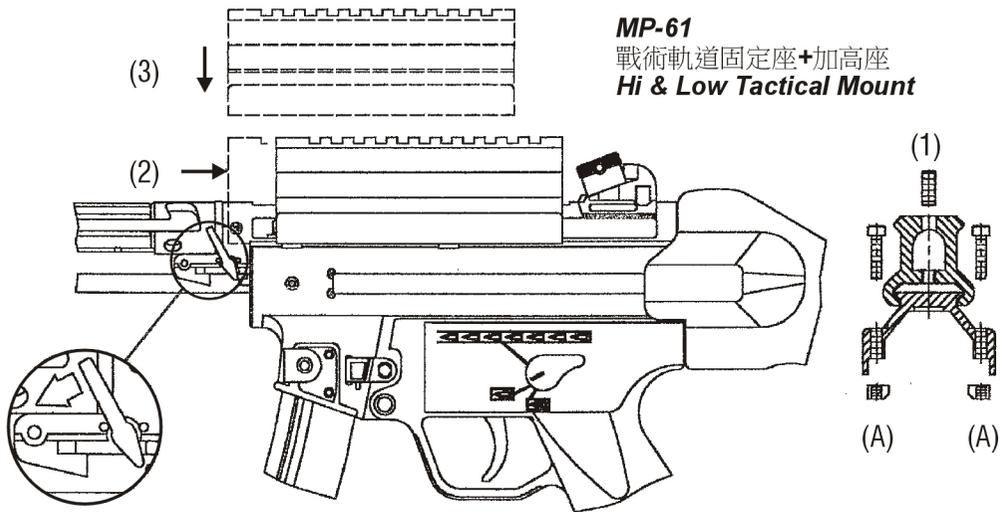

- (1). Loose four clamps(A) below the lower tactical mount and keep clamps on alien screws.
- (2). Insert lower tactical mount into upper receiver
- (3). Insert upper tactical mount into upper receiver and screw the alien screws.

- 1.SD系列須先將戰術軌道前的4個小夾塊鬆開
- 2.待軌道滑入槍身後再將小夾塊鎖緊
- 3.再將加高座滑入戰術軌道固定座


MP-61
戰術軌道固定座+加高座
Hi & Low Tactical Mount

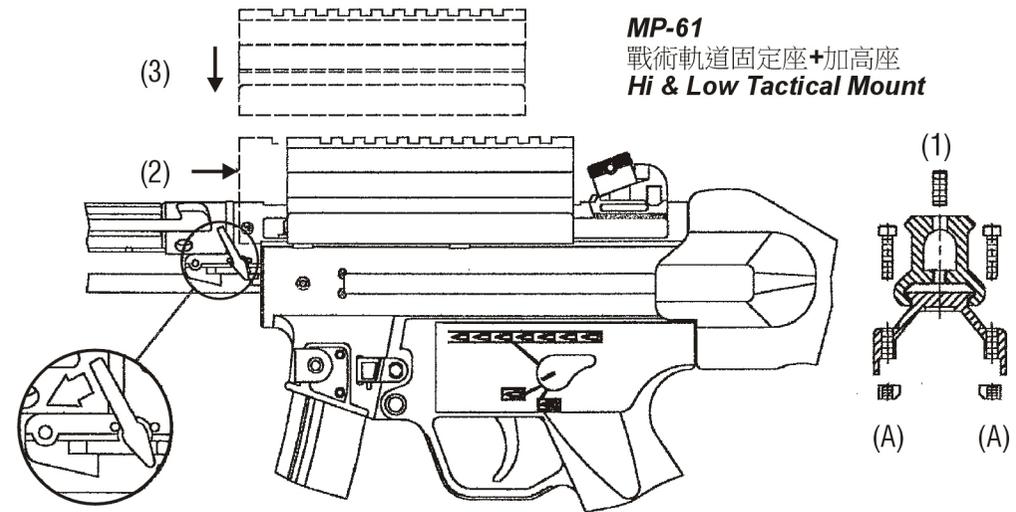

- (1). Loose four clamps(A) below the lower tactical mount and keep clamps on alien screws.
- (2). Insert lower tactical mount into upper receiver
- (3). Insert upper tactical mount into upper receiver and screw the alien screws.

- 1.SD系列須先將戰術軌道前的4個小夾塊鬆開
- 2.待軌道滑入槍身後再將小夾塊鎖緊
- 3.再將加高座滑入戰術軌道固定座


MP-61
戰術軌道固定座+加高座
Hi & Low Tactical Mount

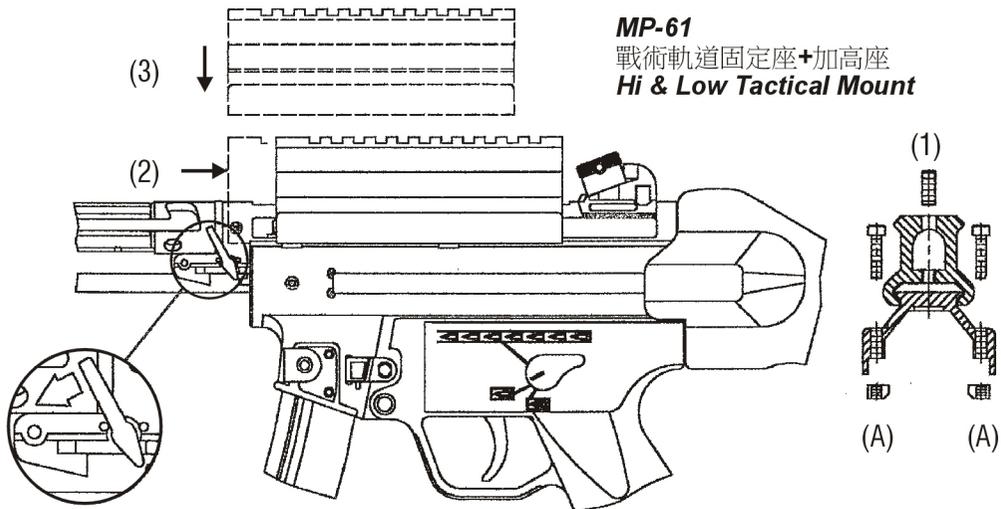

- (1). Loose four clamps(A) below the lower tactical mount and keep clamps on alien screws.
- (2). Insert lower tactical mount into upper receiver
- (3). Insert upper tactical mount into upper receiver and screw the alien screws.

- 1.SD系列須先將戰術軌道前的4個小夾塊鬆開
- 2.待軌道滑入槍身後再將小夾塊鎖緊
- 3.再將加高座滑入戰術軌道固定座

MP-61
戰術軌道固定座+加高座
Hi & Low Tactical Mount

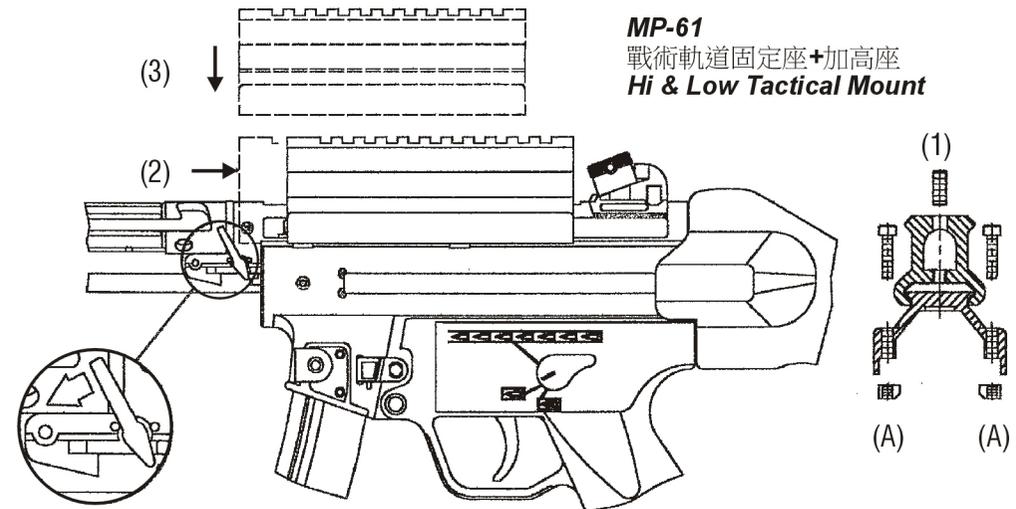

- (1). Loose four clamps(A) below the lower tactical mount and keep clamps on alien screws.
- (2). Insert lower tactical mount into upper receiver
- (3). Insert upper tactical mount into upper receiver and screw the alien screws.

- 1.SD系列須先將戰術軌道前的4個小夾塊鬆開
- 2.待軌道滑入槍身後再將小夾塊鎖緊
- 3.再將加高座滑入戰術軌道固定座